

GB


A. “Door open” indication

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

B. “Service” indication

C. “Water tap closed” indication

D. “Clean pump” indication

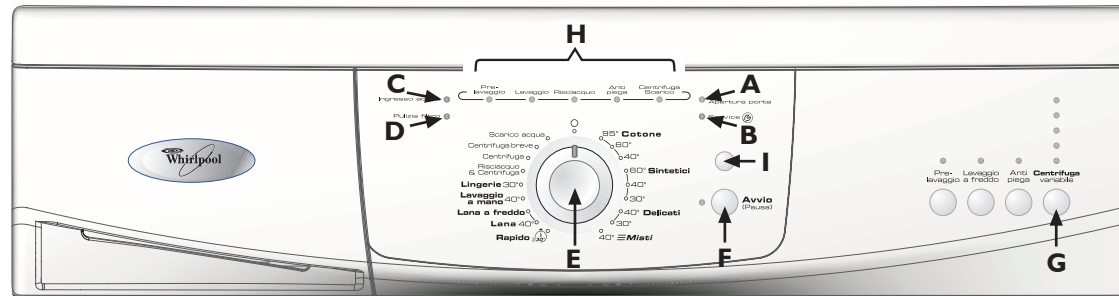

E. Programme selector

F. “Start/Pause” button

G. Spin speed selector

H. Programme sequence indicator

I. “Reset” button

| Programme | | Care Labels | Max. Load kg | Type of wash / Notes - respect the manufacturer's recommendations on the care label | Detergents and Additives | | | Special options | | | | Max Spin Speed rpm |
|--------------------------------------|-------------------------------------|-------------|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------|---------------|--------------|--------------------------|--------------------------------|--------------------------|---------------------------------------|-----------------------|
| | | | | | Pre-wash | Main Wash | Softener | Pre-wash Pre-lavaggio | Cold wash Lavaggio a freddo | Rinse hold Anti piega | Variable spin Centrifuga variabile | |
| Cotton 95 °C | Cotone 95 °C | | 5.0 | Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. With heavily soiled laundry the additional “Prewash” option can be selected as well. | * | Yes | * | * | * | * | * | max. |
| Cotton 60 °C | Cotone 60 °C | | 6.0 | | | | | | | | | |
| Cotton 40 °C | Cotone 40 °C | | 5.0 | | | | | | | | | |
| Synthetics 30 - 40 - 60 °C | Sintetici 30 - 40 - 60 °C | | 2.5 | Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton. | * | Yes | * | * | * | * | * | 1000 ¹⁾ |
| Delicates 30 - 40 °C | Delicati 30 - 40 °C | | 1.5 | Curtains and delicate clothing, dresses, skirts, shirts and blouses. | * | Yes | * | * | * | * | * | 1000 ¹⁾ |
| Daily load 40 °C | Misti 40 °C | | 3.0 | Slightly to normally soiled textiles made of cotton and/or synthetics. | — | Yes | * | — | * | * | * | max. |
| Quick wash 30 °C | Rapido 30 °C | | 3.0 | Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton. | — | Yes | * | — | * | * | * | max. |
| Wool Cold - 40 °C | Lana Freddo - 40 °C | | 1.0 | Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. | — | Yes | * | — | * | * | * | 1000 ¹⁾ |
| Handwash 40 °C | Lavaggio a mano 40 °C | | 1.0 | Textiles made of linen, silk, wool and viscose marked as “handwashable”. | — | Yes | * | — | * | * | * | 400 ¹⁾ |
| Lingerie 30 °C | Lingerie 30 °C | | 1.0 | This cycle is particularly suitable to treat delicate lingerie (use of a laundry net strongly recommended). | — | Yes | * | — | * | * | * | 400 ¹⁾ |
| Rinse & Spin | Risciacquo & Centrifuga | — | 5.0 | Same as the last rinse and the final spin in the “Cotton” programme. | — | — | * | — | — | * | * | max. |
| Spin | Centrifuga | — | 5.0 | In this programme spinning is intensive. Same as the spin cycle in the “Cotton” programme. | — | — | — | — | — | — | * | max. |
| Gentle Spin | Centrifuga breve | — | 1.0 | In this programme spinning is gentle. Same as the spin cycle in the “Wool” programme. | — | — | — | — | — | — | * | 1000 ¹⁾ |
| Drain | Scarico acqua | — | — | Drain only - no spinning. Alternative method of terminating programme after “Rinse Hold”. | — | — | — | — | — | — | — | — |

* : option / Yes : dosing required

¹⁾ For improved garment care spin speed is restricted in these programmes.

Whirlpool is a registered trademark of Whirlpool USA.

5019 301 01059

CONSUMPTION DATA

| Programme | Temperature (°C) | Load (kg) | Water (l) | Energy (kWh) | Approx. Programme Duration (hours : minutes) |
|------------|------------------|-----------|-----------|--------------|----------------------------------------------|
| Cotton | 95 | 5.0 | 49* | 1.90 | 2:00 |
| Cotton ** | 60 | 6.0 | 49 | 1,02 | 2:20 |
| Cotton | 40 | 5.0 | 44 | 0.60 | 2:00 |
| Synthetics | 60 | 2.5 | 50* | 0.70 | 1:30 |
| Synthetics | 40 | 2.5 | 45 | 0.55 | 1:15 |
| Delicates | 30 | 1.5 | 50 | 0.50 | 0:45 |
| Daily load | 40 | 3.0 | 45 | 0.45 | 1:00 |
| Quick wash | 30 | 3.0 | 40 | 0.40 | 0:30 |
| Wool | 40 | 1.0 | 55 | 0.60 | 0:45 |
| Handwash | 40 | 1.0 | 45 | 0.60 | 0:40 |
| Lingerie | 30 | 1.0 | 45 | 0.50 | 0:36 |

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

** Reference Programme for Energy Label.

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergents as indicated on the front page and as described in the chapter “Detergent and Additives” in your Instructions for Use. Close the door and turn the **programme selector** to the desired programme and temperature. The indication lamp next to the **“Start/Pause”** button flashes.

SELECT ANY DESIRED OPTION

Push the button(s) of any option(s) desired - the respective indication lamp lights up. When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

“Prewash” button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for main wash when activating the Prewash option.

“Cold wash” button

- Water is heated only up to 20°C.
- Suitable for delicate laundry items with wash temperature recommendation of max. 30° on the care label.
- Selectable only on the lowest temperature step of each programme.**

“Rinse hold” button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programmes “Synthetics”, “Daily load” and “Delicates”.
- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

Note: The programme stops to “Rinse hold” at the time the “Rinse hold” light in the programme sequence indicator is on. The indication lamp next to the **“Start/Pause”** button flashes.

- If you select “Rinse hold” do not leave items to soak for too long.

Terminate the “Rinse hold” option:

- Press the **“Start/Pause”** button; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector knob to the “Drain” programme and press the **“Start/Pause”** button.

“Variable spin” button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed “0” is selected, the final spinning is cancelled but intermediate spin peaks remain during the rinse. The water is drained out only.

PROGRAMME START

Open the tap and press the **“Start/Pause”** button. The indication lamp next to the **“Start/Pause”** button lights up.

The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain.

When the programme phase is finished, the corresponding indication goes out.

“DOOR OPEN” INDICATION

Before starting and after end of a programme, the lamp lights to show the the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to “Cancel (Reset) a running programme before the end”.

RED INDICATIONS

“Service”

Lighting up of the “Service” indication can be caused by a fault in an electrical component. Refer to the “Troubleshooting Guide” in your “Instructions for Use”; if the fault persists, contact our After Sales Service.

“Water tap closed”

The appliance has no or insufficient water supply. Open the water tap: if the indications still lights up, refer to the “Troubleshooting Guide” in the Instructions for Use.

“Clean pump”

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned: in the latter case refer to the Instructions for Use (“Removing the Filter”).

PROGRAMME END

- All the lights of the programme sequence indicator are off, and the “Door open” indication lights up.
 - Turn the programme selector to the “Off/O” position.
 - Close the water tap.
 - Open the door and unload the machine.
 - Leave the door ajar to allow the drum to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

- Press the **“Start/Pause”** button to pause the programme. The light flashes.
- Select the new programme (with temperature), any options and another spin speed if you want.
- Press the **“Start/Pause”** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The **“Reset”** button cancels a programme before the end.

- Press the **“Reset”** button for at least 3 seconds. Any existing water is drained out before the door can be opened.